

Art. no 12-1130 (complete set)

For measuring dynamic movements.

Included parts

2 pcs DM brackets

4 pcs mounting plates (glue)

2 pcs mounting plates (bolt)

Glue Loctite HY4070 See information on next page!

4 pcs screw M6x20

Hexagon wrench 5 mm




Delivered in plastic case

Mount the bracket


1. Mount a measurement unit in the bracket.
2. Fasten the unit with the screws on the rods. (Do not use the screws on the measuring units.)
3. Decide where to place the bracket. Place it on the same height as the shaft centre.
4. Use a bolt or glue mounting plate to fasten the bracket.

Glue

5. Remove paint on the machine.
 6. Clean the surface.
 7. Put on gloves and protective glasses.
 8. Apply glue (Loctite HY4070 or similar) on the bracket and place it on the machine. See warning information on next page!
- Fixing time 5 minutes. Full strength after 24 hours.

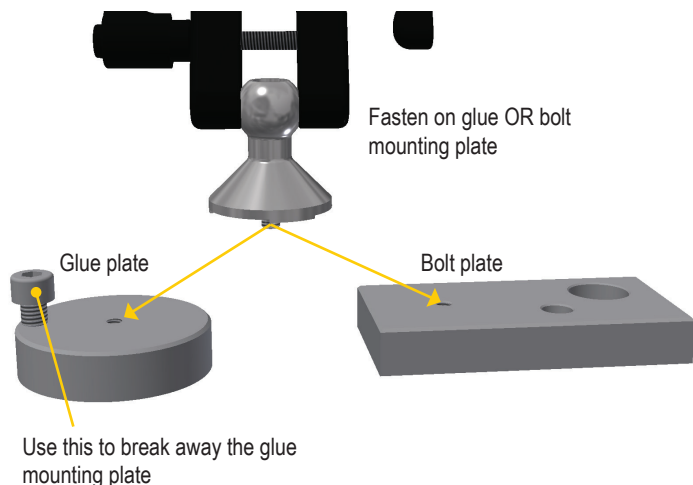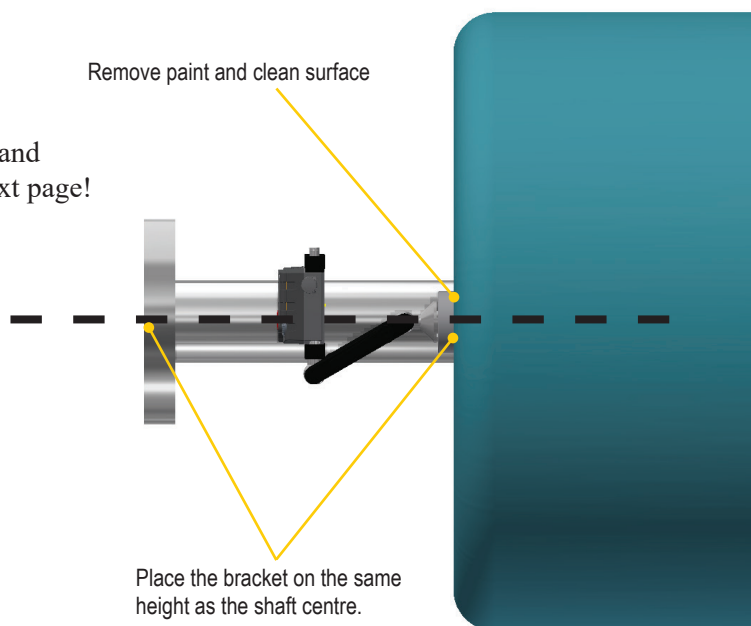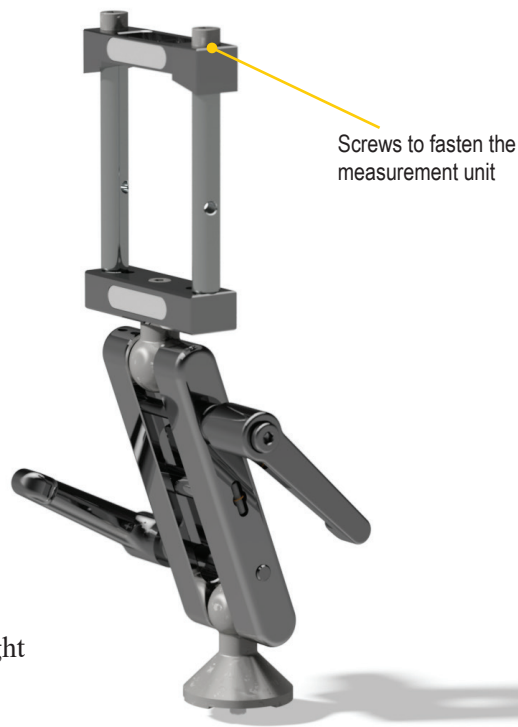

Fixing time for Loctite HY4070

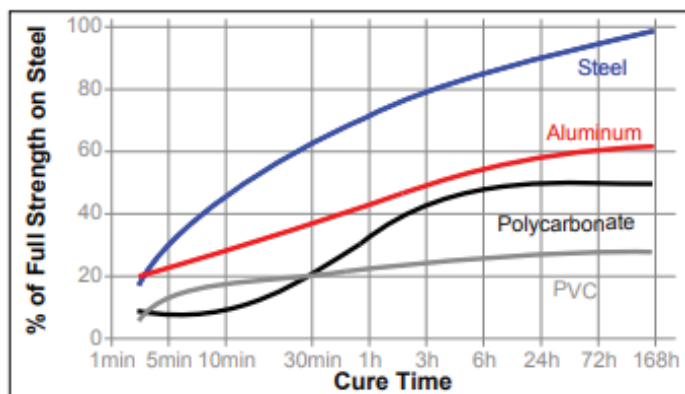

Warning information for Loctite HY4070

Hazard statement:

H315 Causes skin irritation.
H319 Causes serious eye irritation.
H335 May cause respiratory irritation.



Supplemental information

EUH202 Cyanoacrylate. Danger. Bonds skin and eyes in seconds. Keep out of the reach of children. Contains Methyl acrylate. May produce an allergic reaction.

Precautionary statement:

P261 Avoid breathing vapours.

Prevention

P280 Wear protective gloves/eye protection.

Precautionary statement:

P305+P351+P338 IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.

Response

P337+P313 If eye irritation persists: Get medical advice/attention.

Precautionary statement:

P501 Dispose of waste and residues in accordance with local authority requirements.

Disposal

For more information see www.loctite.com